 


QUICK START GUIDE


ASH CLEANER

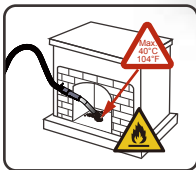


NILFISK

EN	Quick Start Guide	1
EN	Safety Instructions (Original instructions).....	8
DE	Sicherheitshinweise.....	9
FR	Consignes de sécurité.....	10
NL	Veiligheidsinstructies.....	11
IT	Istruzioni di sicurezza.....	12
NO	Sikkerhetsinstruksjoner.....	13
SV	Säkerhetsinstruktioner	14
DK	Sikkerhedsinstruktioner	15
FI	Turvallisuusohjeet	16
ES	Instrucciones de seguridad	17
PT	Instruções de segurança	18
EL	Οδηγίες ασφαλείας.....	19
SL	Varnostna navodila	20
HR	Sigurnosne upute	21
SK	Bezpečnostné pokyny	22
CZ	Bezpečnostní pokyny	23
PL	Instrukcje bezpieczeństwa	24
HU	Biztonsági előírások	25
RO	Instrucţiuni de siguranţă.....	26
BG	Инструкции за безопасност.....	27
ET	Ohutusjuhised.....	28
LV	Drošības instrukcijas.....	29
LT	Saugos instrukcijos	30
JP	安全上の注意.....	31
32	 تعليمات السلامة	AR
EN	Declaration of Conformity	33

 A

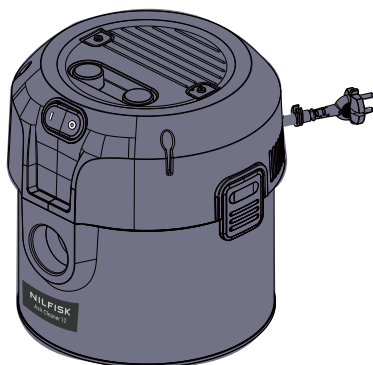


12L

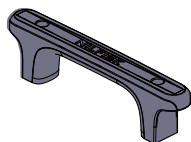 


x1



 x2

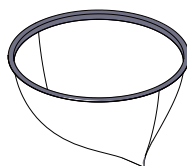

x1

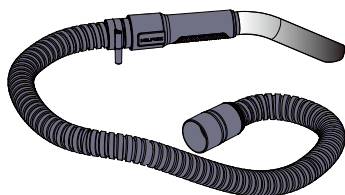 

x1

 


x1


B





1

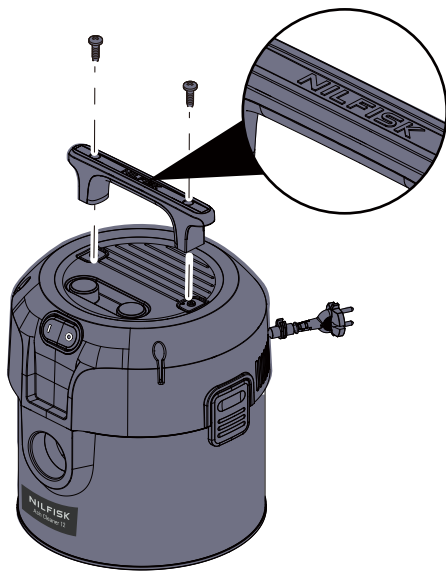


2

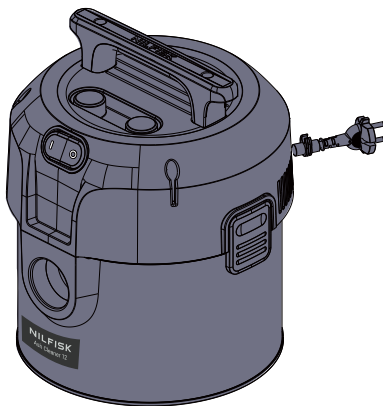 





B

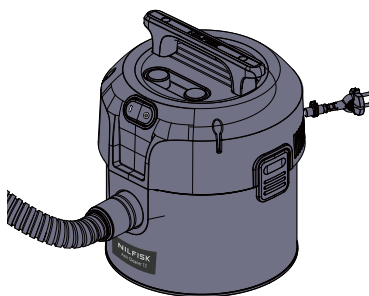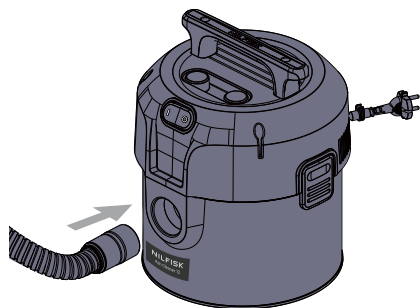  



C

 


D

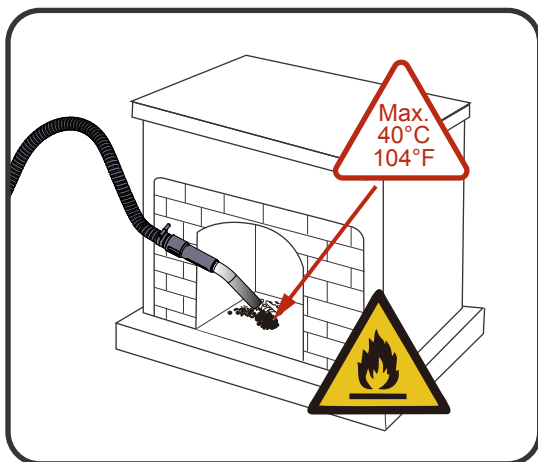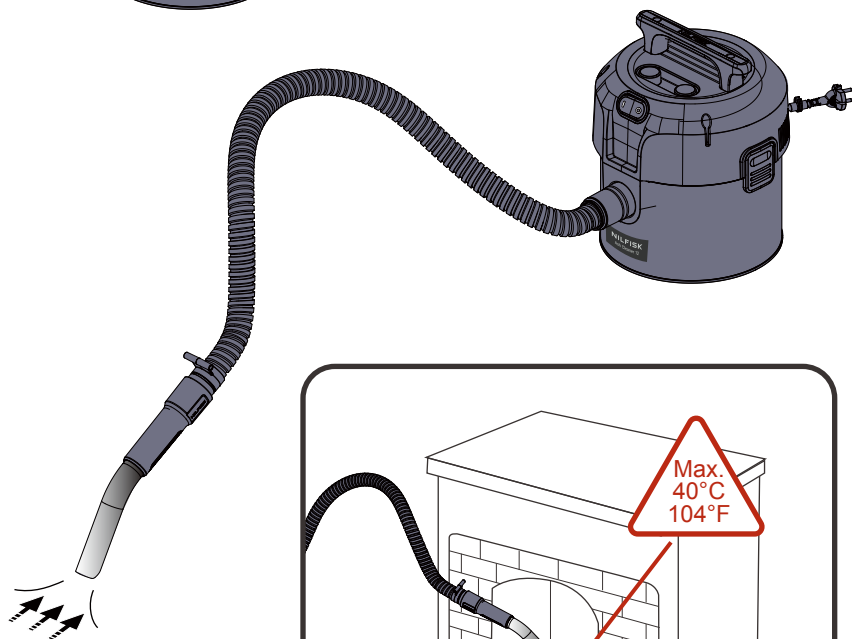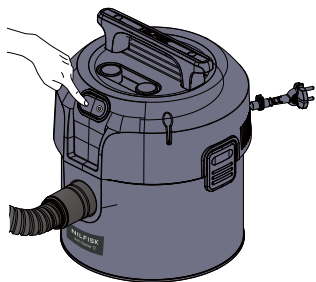    


E

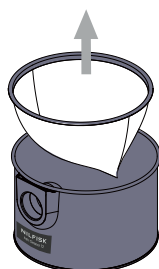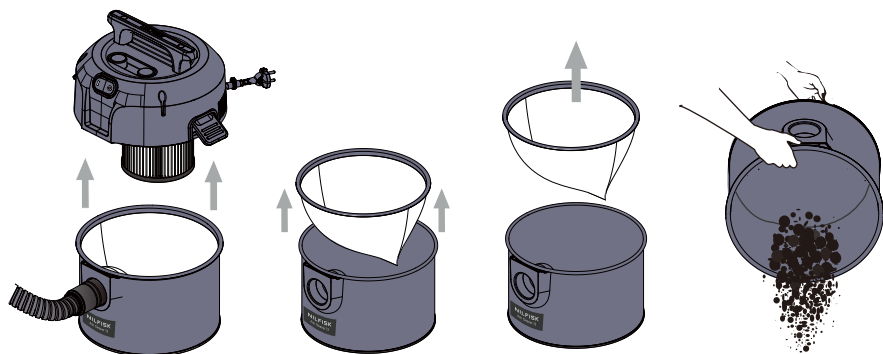  






1

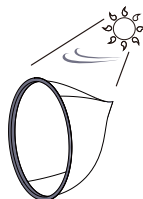 

2

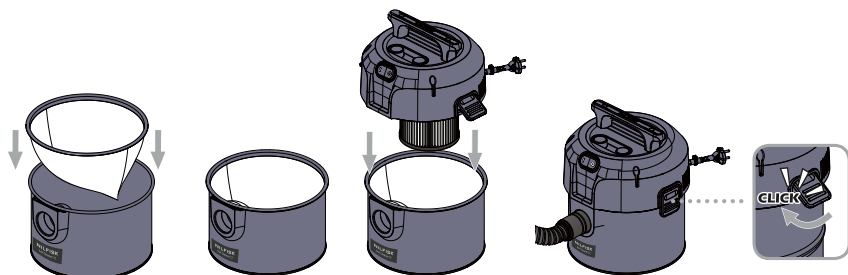 





F

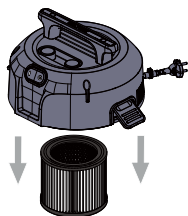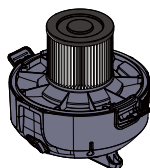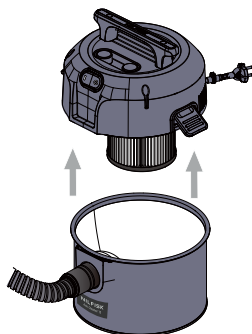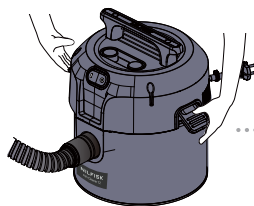     




1



    2

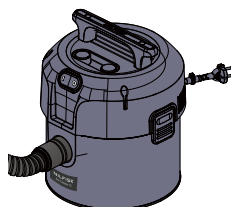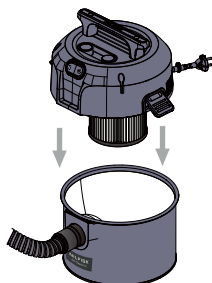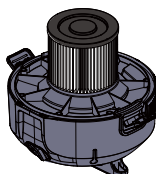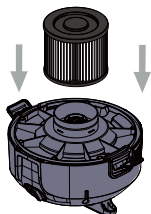

G

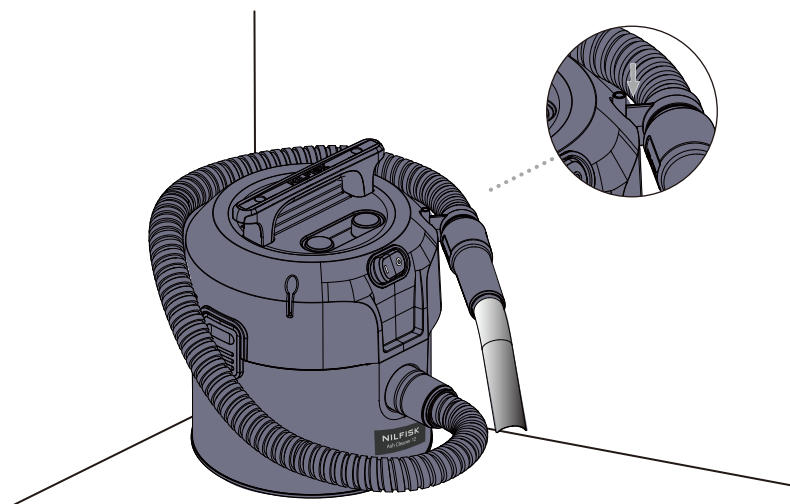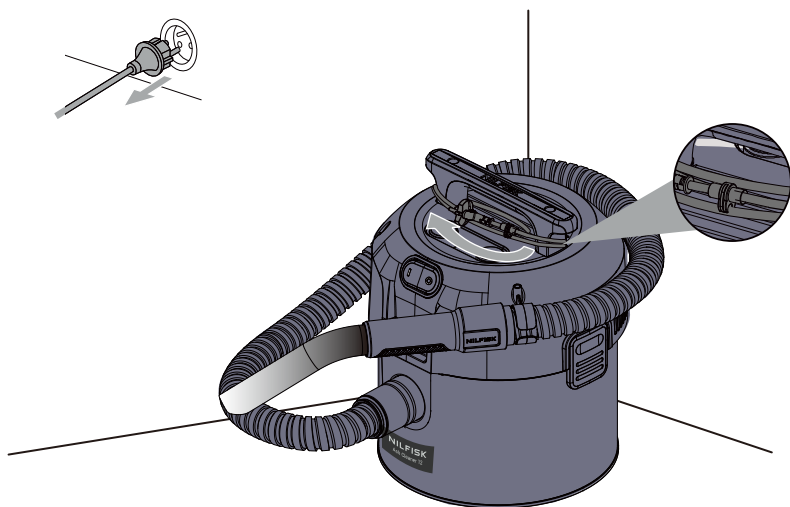   

SAFETY INSTRUCTIONS



Before first use of the machine, read the instructions carefully. Save instructions for later use.



Safety instructions marked with this symbol must be observed to prevent personal injury or serious damage to property.

PURPOSE AND INTENDED USE

This ash vacuum is for household use only. This appliance is intended to pick up cold ash from fireplaces, chimneys, ovens, ashtrays, and similar places of ash accumulation. It is not suitable for vacuuming liquids, soot or cement dust, nor for use with heating boilers or oil-burning ovens. Vacuuming glowing embers, combustible materials, explosive dust, or any substance hazardous to health is strictly prohibited.



WARNINGS

- This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety. Children should be supervised to ensure that they do not play with the appliance.
- Cleaning and user maintenance shall not be made by children without supervision.
- **This ash vac is for household use only. Never use this product to vacuum liquids. Only use this unit to vacuum dry dust material.**
- Do not vacuum up soot.
- Never spray water on the upper section of the vacuum cleaner. Danger for persons, risk of short-circuiting.
- Vacuuming up hazardous materials can lead to serious or even fatal injuries. The following materials must not be picked up by the vacuum cleaner: Hazardous dust; Hot materials (burning cigarettes, hot ashes etc.); Flammable, explosive, aggressive liquids (e.g. petrol, solvent, acids, alkalis, etc.); Flammable, explosive dust (e.g. magnesium or aluminium dust etc.). The list is not comprehensive.
- **WARNING: Risk of fire**
Do not pick up hot, glowing or burning ash. Pick up cold ash only.
The dust container must be emptied and cleaned before and after each use.
Do not use paper dust bags or bags made from similar flammable materials.
Do not use any other vacuum cleaner to vacuum ash.
Do not rest the ash vacuum cleaner on flammable or polymeric surfaces, including carpeting and vinyl tile.
- **The temperature of the vacuumed material must be below 104°F (40°C). If it exceeds 104°F (40°C), there is a risk of fire.**
- Do not handle the electrical cable or plug with wet hands.
- Do not unplug by pulling on cable. To unplug, grasp the plug, not the cable.
- Always remove the electric plug from the socket before carrying out maintenance work on the machine or cable.

- No changes to the mechanical, electrical or thermal safety devices must be made.
- Never use the vacuum cleaner if the filter is not installed or if damaged.
- Before using the vacuum cleaner make sure that the voltage shown on the rating plate of the vacuum cleaner corresponds to the voltage of the local mains power supply. It is recommended that the vacuum cleaner should be connected via a residual current circuit breaker.
- The vacuum cleaner must not be used if the electrical cable or plug shows any sign of damage. Regularly inspect the cable and the plug for damage. If the power cord is damaged, it must be replaced by Nilfisk Service or an electrician to avoid danger before use of the vacuum cleaner is continued.
- Safe disposal of the picked-up material.
Dispose of collected ash in a non-flammable container according to local waste regulations.

SERVICE

Please refer to our website at www.nilfisk.com for further instructions and information on use. • For Service, contact your local dealer.

WEEE



The symbol indicates that this appliance may not be discarded together with household waste, but must be collected separately. Please dispose old appliances at the applicable collection point for recycling.

Model	Ash Cleaner 12
	EU
	12 L
Voltage (V)	220-240
P _{NOM} (W)	800
P _{max} (W)	870
Power socket _{max} (W)	NA
IP	IP24
Tank capacity (L)	12*
Tank material	Metal
Supply cord - length (m)	4