RETRO

Skydedørssæt 2 meter


RETRO


Slidingdoor system 2 meter

Art: 10401




Version: 01-2018

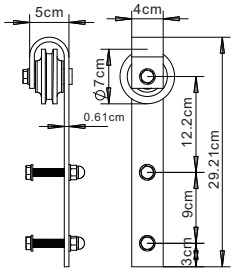





Single door hardware kit includes		
Part Name	picture	200cm
Steel Hanger		2
Flat Track		1
Adjustable Spacer		5
Floor guide		1
Lag Bolt		5
Washer		5
Door Stopper		2
Anti-jump Pad		2
Hex Wrench		1
Bolt with acorn nut		4

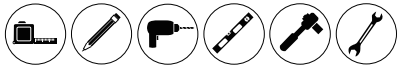


Steel Hanger | Flat Track | Adjustable Spacer | Floor Guide

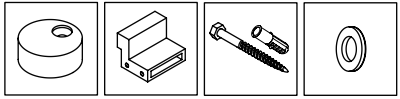

Anti-jump Pad | Door Stopper | Lag Bolt | Washer

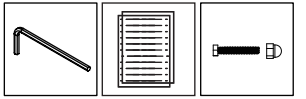

Hex Wrench | Installation Manual | Bolt with acorn nut

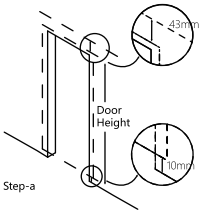

Step-a

1. (1.69" + Door Height + 0.4"/) is the distance between the finished floor and the horizontal line that you will pencil for the track.


(43mm + dørens højde + 10mm) er afstanden mellem det færdige gulv og den vandrette linje, som du skal markerer med blyant for sporet.

2. Check if your floor is level. If not, please measure the distance from the highest point of your floor.

Tjek om dit gulv er lige. Hvis ikke skal du måle afstanden fra det højeste punkt på dit gulv.

3. Make sure that the horizontal line has the same length as your track length. So you can easily find your track hole center position to attach the track to your wall in the following steps.

Sørg for, at den vandrette linje har samme længde som din skinne længde. Så kan du let finde linjen gennem hullerne i skinnen når du skal markerer til hullerne. Følg de næste trin.

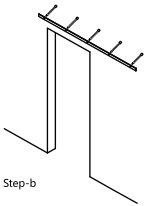

Step-b

1. Hold up your track so that the marked line from Step-a will be visible through the track holes.

Hold din skinne mod væggen, så den markerede linje kan ses gennem skinne hullerne.

2. Mark an intersecting line in the center point of each track hole.


Marker en krydsende linje i midtpunktet af hvert skinne hul.

3. Set the track down.

Fjern skinnen igen.

4. Drill out your marked track holes using a drill with "12mm" drill bit. If wooden wall, you do not need to drill holes.

Hvis du monterer skinnen i en væg af mursten, beton eller lign. Skal du bore dine huller med et 12 mm bor. Hvis du monterer i en træ væg, behøver du ikke at bore huller.

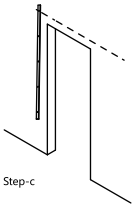


Step-c

1. Put a door stopper on the end of the track and use the hex wrench to make it tight later. (See below)


Sæt en dør prop på enden af sporet og bruge skruenøgle til bolten: (se nedenfor)

2. Loosely attach the end of the track on the wall.

Fastgør enden af sporet på væggen løst.

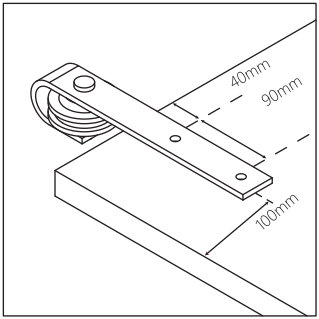

HomeFixer
All Your Home Needs

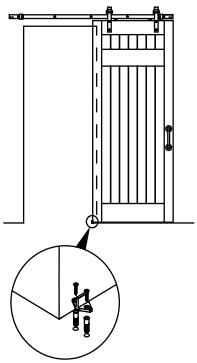

1. Guide your door to the resting position.
Sæt din dør til hvileposition

2. Use your level to plumb your door.
Brug dit vaterpas til at stille døren lige.

3. When the door is in the opening position, place the floor guide half way into the door slot.
Når døren er i åben position, skal du placere gulvskinnen halvvejs ind i dør-noten i bunden af døren.

4. Double check that your door is plumb.
Dobbelttjek, at din dør er i vater.


5. Hold the door guide firmly in position and mark centers in the middle of both floor guide holes .
Hold gulvskinnen fast i positionen, og marker centeret af begge huller i gulvskinnen.

6. Use a "6mm" drill bit to drill 2 holes on the floor at the centers you have marked.
Brug et 6mm bor til at bore 2 huller i gulvet hvor du har markeret.


7. Put the plastic expansion nails into both of the holes.
Sæt rawlplugs begge huller.

8. Repeat the Step-I-3 and Step-I-4 and then hold the floor guide firmly in place, install the screws to secure your floor guide to the floor using a drill with a phillips bit.
Gentag trin-1-3 og trin-1-4 og hold gulvskinnen fast når du monterer skruerne i gulvskinnen.

9. Now you have completely installed your sliding barn door.
Nu har du installeret din skydedør.

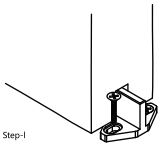

Step-I

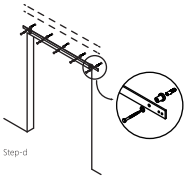

Step-d

1. Swing the track up and make it horizontal, then repeat the Step-c on the other end of the track.
Swing skinnen op til vandret, derefter gentage trin-c i den anden ende af sporet. Gentag på alle resterende midterste spor huller.

2. Repeat on all remaining middle track holes.
Gentag på alle resterende midterste spor huller.

3. Fully tighten all bolts with your wrench after all bolts are in. Be careful not to make it too tight to strip the wall studs off.
Spænd alle bolte helt fast med din skruenøgle. Vær omhyggelig med ikke at overspænde dem så rawlplugsene ødelægges.

4. Now you have installed the track on the wall successfully.
Nu har du installeret køreskinnen.



Step-e

1. Open a slot (0.28"/7mm wide, 0.79"/20mm deep) at the bottom of the door with a chainsaw. It will be used for installing the floor guide.
Hvis der ikke allerede er lavet en not i bunden af døren, skal der laves en på 7mm i bredden, 20mm dyb. Noten laves lettest med en rundsav eller fræser. Noten skal bruges i forbindelse med gulvskinnen.


1. Lay your door facing up and put your hanger on it. Pencil a line parallel from the door edge. The distance depends on the position of your door stopper.
Læg døren fladt ned og placer bøjlen med hjul hvor den skal monteres. Tegn en linje parallelt fra døren kanten. Afstanden afhænger af placeringen af din dør prop.

2. Line up your hanger along the line you just made.
Placer din bøjle langs den linje, du lige har lavet.


3. Hold your hanger in place, the distance from the door edge to the first hole is 1.575" and to the second hole is 5.118"
Hold din bøjle på plads, afstanden fra døren kant til det første hul er 40mm og til det andet hul er 130mm.

4. Mark the center of both hanger holes.
Marker midten af begge bøjle huller.

5.Repeat on the opposite door edge.
Gentag på den modsatte side af døren.

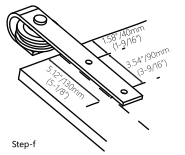

Step-f

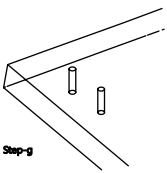


Step-g

1. Drill a pilot hole all the way through the door using a "10mm" bit at the center that you had marked from Step-f. Be careful and make it smooth.

Bor et hul hele vejen gennem døren med et 10 mm bor, midt i de afmærkede huller (Som du havde markeret fra trin-f.) Vær forsigtig og undgå skader på døren.

2. Repeat on the above the other centers that you have marked.

Gentag på alle dine hulmarkeringer.

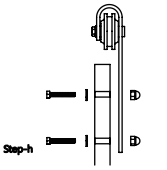


Step-h

1. Thread the hex bolt with the washer through the back of the door.

Sæt en bolt igennem spændeskiven og gennem hullet fra bagsiden af døren, gennem bøjlen og monter møtrikken.

2. Hold hex bolt in place using a wrench and tighten your acorn nut by hand.

Bolten holdes på plads med sekskant-nøglen og møtrikken strammes med en skruenøgle. Du skal ikke stramme helt endnu – først når alle bolte er monteret

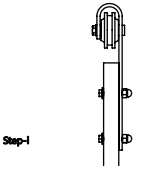

Step-i

1. Using a wrench for the hex bolt and another wrench for the acorn nut, gently tighten, be careful not to damage your hanger or acorn nut.


Brug sekskant-nøglen og skruenøglen til forsigtigt at stramme boltene, passe på ikke at skramme din bøjle eller møtrik.

2. Repeat the step on the opposite edge of the door.

Gentag trinet på den modsatte side af døren.

3. Now you have installed your hangers to your door.

Nu har du installeret dine kørebøjler til din dør.

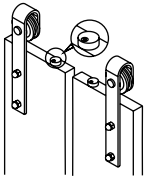


Step-j

1. Place your anti-jump pad on the top of the door near the hanger. Loosely attach the wood screw with the anti-jump pad to the door.

Placer din afsporings-beskyttelse på toppen af døren i nærheden af bøjlen. Fastgør med en skrue til døren.

2. Swing it to the other side so that you can hang the door on the track. Then you should swing it back to the position and tighten it on the door. It can help prevent the door falling down from the track.

Drej den til siden, så du kan hænge døren på skinnen. Så kan du svinge den tilbage til den rigtige position og stramme den på døren. Dette er med til at forhindre døren falder ned fra sporet.

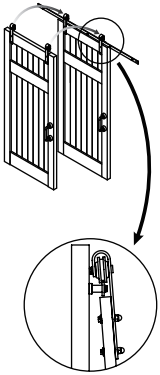

Step-k

1. Lift your door up to your track at a slight angle and rest both wheel grooves onto the top of the track carefully.

Løft døren op til skinnen i en lille vinkel og placer begge hjulriller på toppen af sporet omhyggeligt. Døren skulle nu kunne bevæge sig frit på skinnen.

⚠ WARNING

- Failure to wear proper safety gear (i.e.,eye protection) may result in serious injury or death. Always wear proper safety gear before using power tools.

- Improper operation of power tools may result in loss of control, serious injury or death. Always ensure you have complete control of the power tool and the work area is free of hazards before operatiog a power tool.

- Lack of secure clamping of the door may result in unexpected movement of the door,loss of power tool control and serious injury or death. Always securely clamp the door in place before cutting,or drilling, the door.

- Lack of ,or improperly installed Anti-jump Disc may result in the door coming off the track and cause serious injury or death. installation of Anti-jump Disks are required for safe operation of this hardware. installed properly, these discs will keep the door securely attached to the teack.

⚠ CAUTION

- Mishandling of heavy objects (i.e.,doors) may cause a loss of balance and serious injury. Always be sure you have a secure hold on the object and are balanced before moving the object.Always wear safety shoes when lifting heavy objects.

- Getting body parts (i.e., hair,fingers) caught in moving parts may cause pinching and serious injury.Do not put fingers in parts that may move and always remove or contain anything on your body that may become entangled with a moving part.

- Closing sliding doors with your hand on the end of the door may result in your hand, or fingers, getting caught between the door and other solid objects (i.e., another door, molding) causing serious injury. Always use the door handle to close doors.

NOTICE

Use of excessive force when opening, and closing,the door(s) may result in damage to the hardware.Always hold the handle and gently open and close the door(s).

