


— 400.00 mm

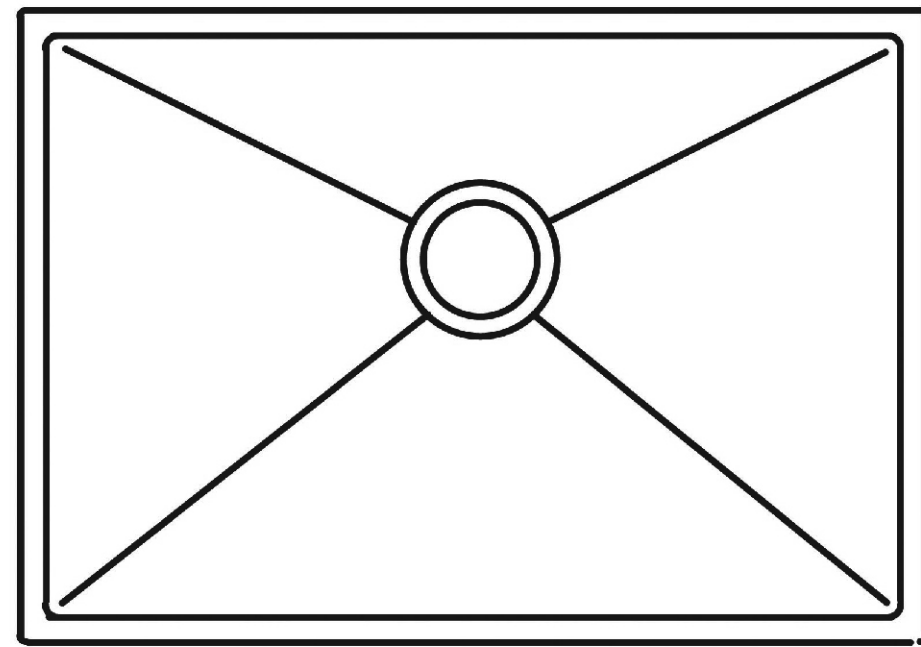

R12



Please check the actual size of the template relative to the sink for a more accurate cut.

DK

Venligst kontroller at skabelonens mål er i overensstemmelse med vaskens mål.

Bitte überprüfen Sie die aktuelle Vorlage gegen die Spüle für einen möglichst genauen Schnitt.



Per un taglio più accurato, verificare le dimensioni attuali della sagoma rispetto al lavandino.

Por favor, compruebe el tamaño actual de la plantilla con el fregadero para un corte más preciso.





Veillez vérifier le gabarit actuel par rapport à l'évier pour obtenir une coupe aussi précise que possible.

 Top Mount Under Mount


INSTALLATION STEPS

* Please choose installation method according to your needs


Trepanning

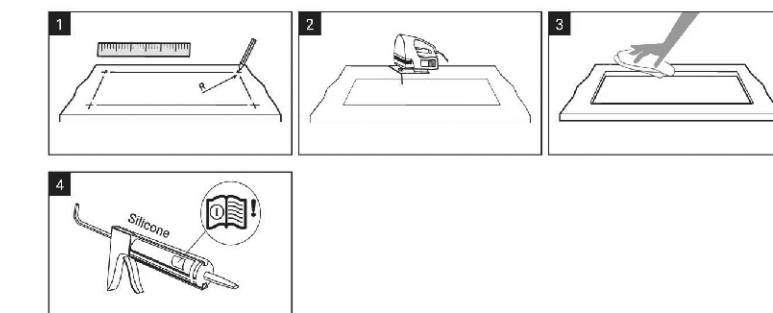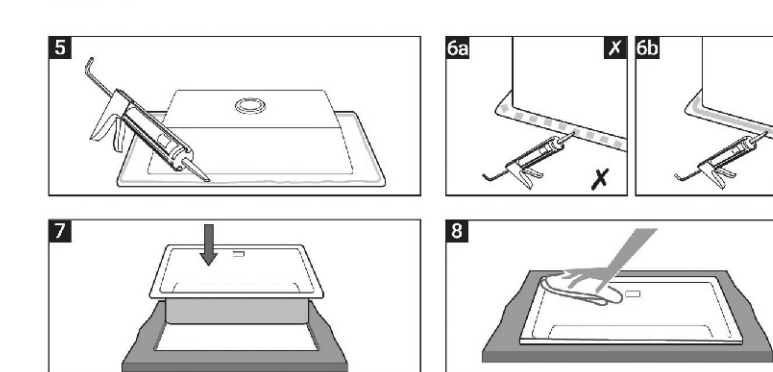 **Topmount 1**

Topmount 2

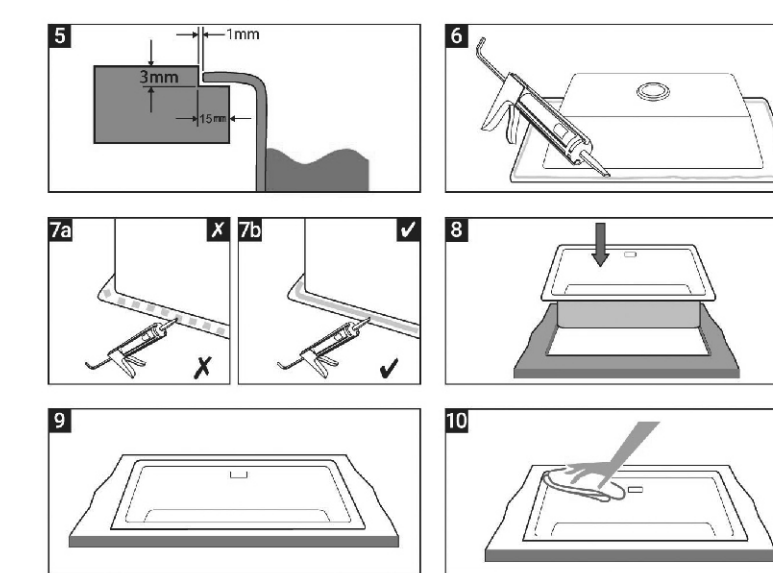

Undermount

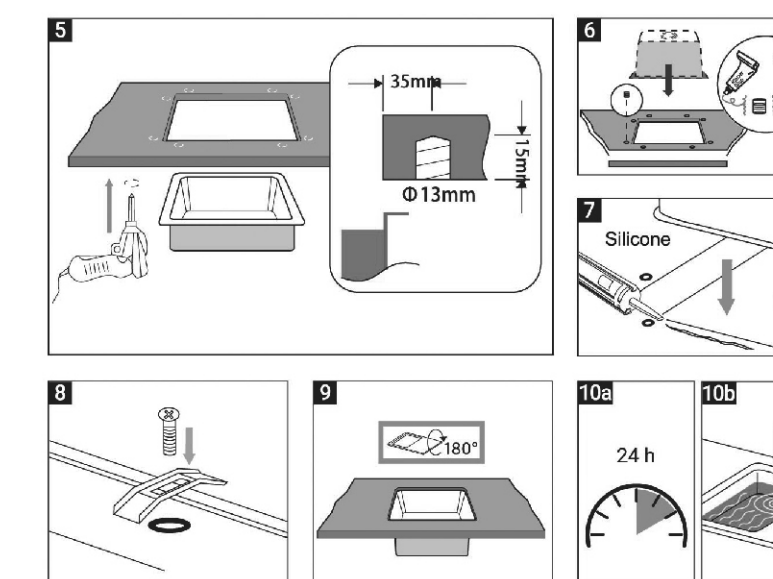

400.00 mm

420.00 mm